



www.Genovation.com

Sales: 1-800-822-4333


Keypad Stand Assembly Instructions

Step 1: Snap A and C together



3/4" Hose segment	3/4" Hose Fixed Mount	3/4" Hose Double Socket	PC Plate (T: 5mm; 4.25"x2.5")
6pcs/segment	2 pcs	1pc	2pcs
A	B	C	D

Step 2: Screw B and D together using E and F and H

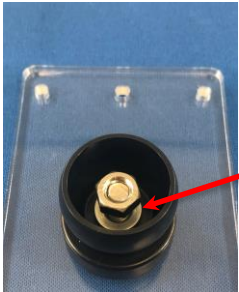

Note washer placement



1/4-20-1" Flat head phillips screw	1/4-20 Nut	8-32-3/8" Pan head phillips screw	Washer
2pcs	2 pcs	2pcs	2pcs
E	F	G	H

Tools
Required


(1) Phillips
screwdriver

(1) Plier

Step 3: Push both bases onto the flex tube





Suggested Velcro placement

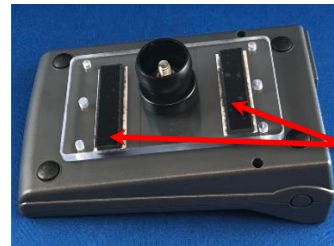

Keypad shown attached with Velcro (Velcro included)

Optional: for ControlPads with flat bottom cases only

Screw the keypad stand to the base of the keypad using part G

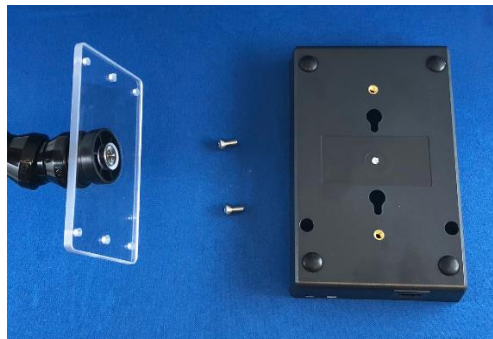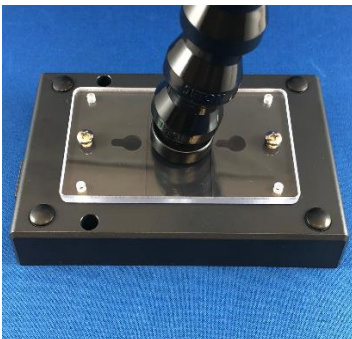

(Keypad with flat base required, new option when ordering custom keypads)